

⚠ ATTENTION: Before starting installation, lock the doors and place the key at least 20 feet away from the vehicle. Wait 10 minutes for the vehicle to go to sleep.

Remove the engine cover. For C8 convertible unbolt the engine cover.





convertible shown


Locate the fuel line and remove the metal retainer clip by prying it off.




CAUTION: FUEL LINE MAY BE UNDER PRESSURE. Place a rag under the fuel line before disconnecting to catch spilled fuel. Use the included fuel line removal tool. Lubricate fittings.

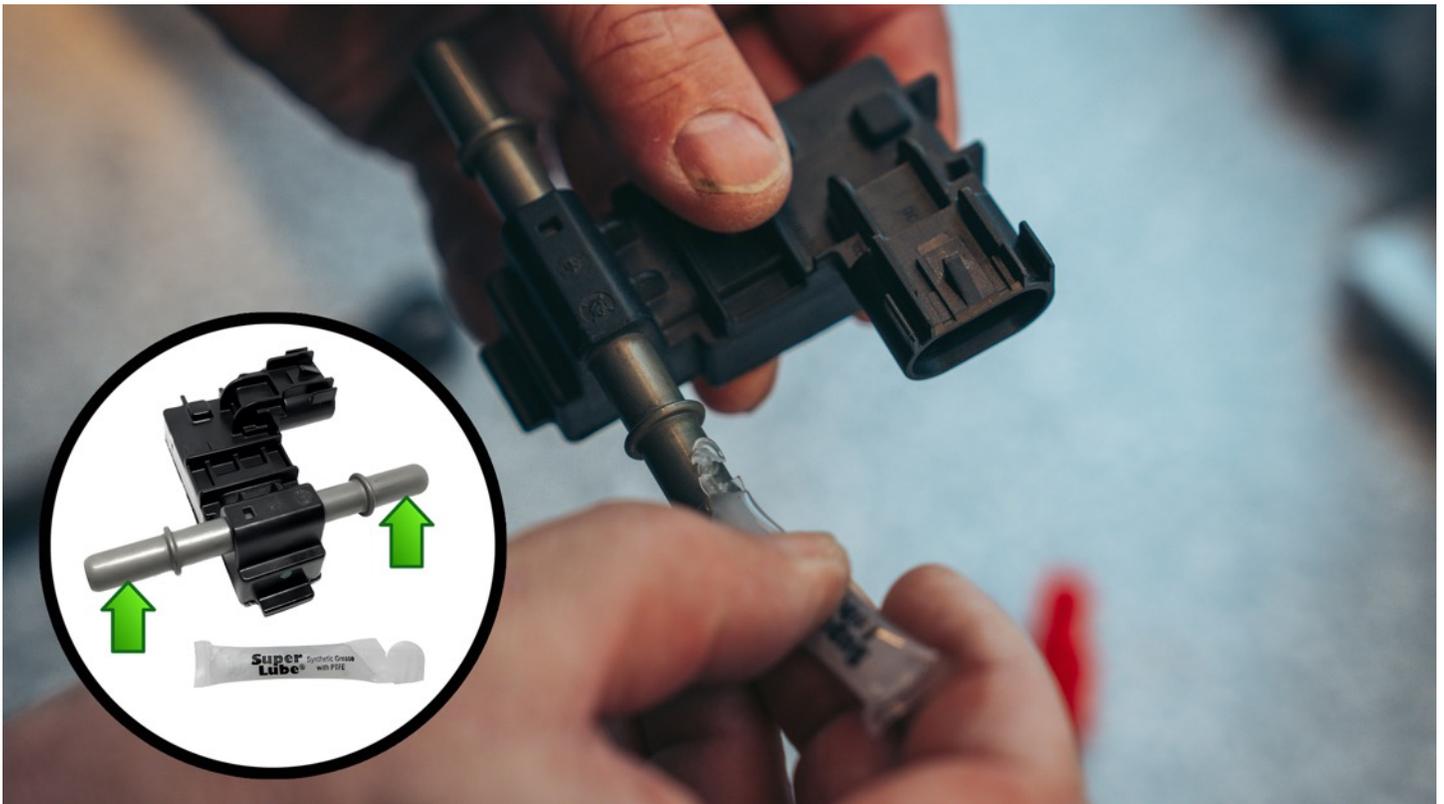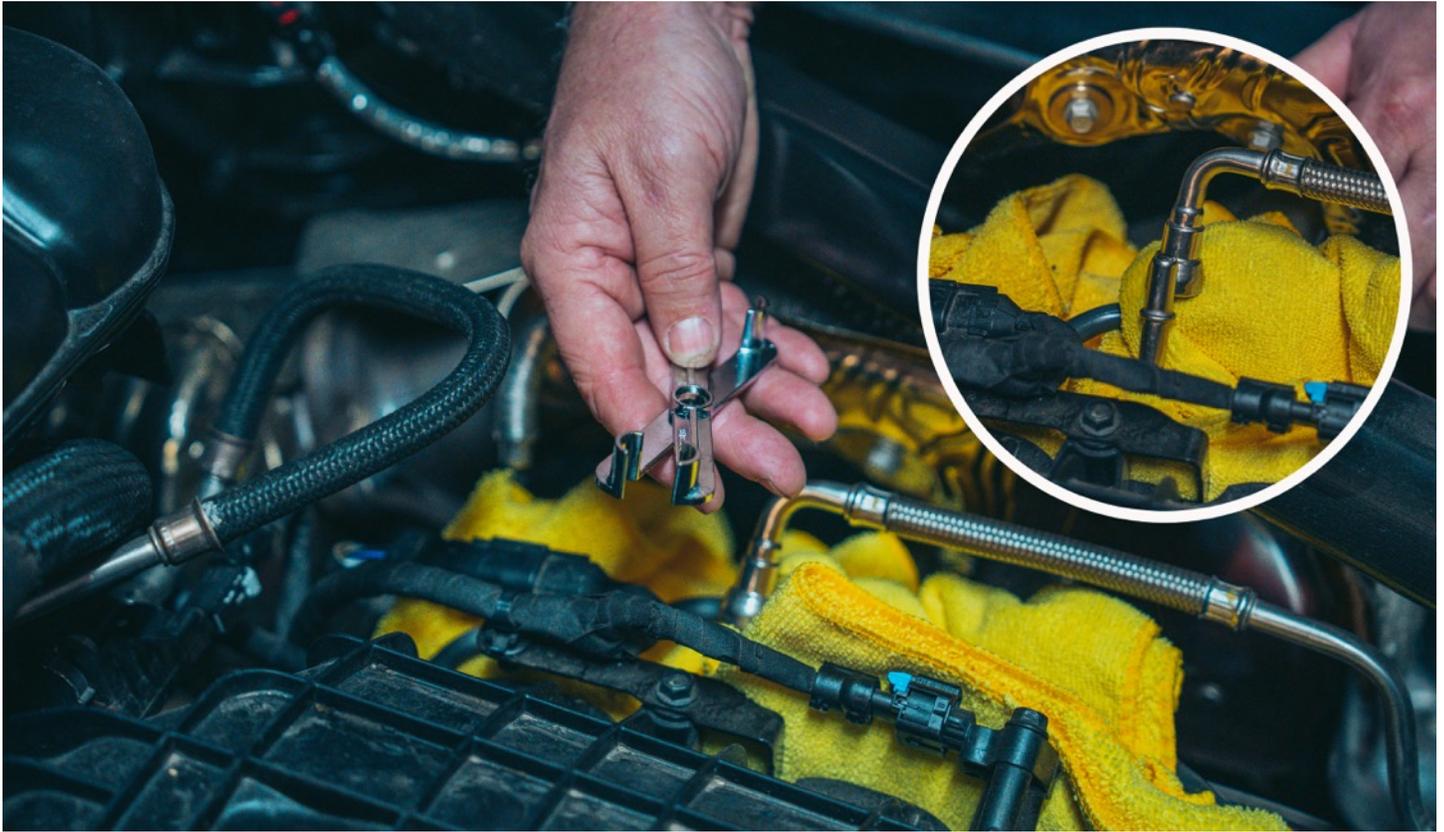

Using a 5/8" wrench connect and secure the included twist-lock fittings to the ethanol sensor as shown below. Make sure the twist-lock fittings lock securely in place.

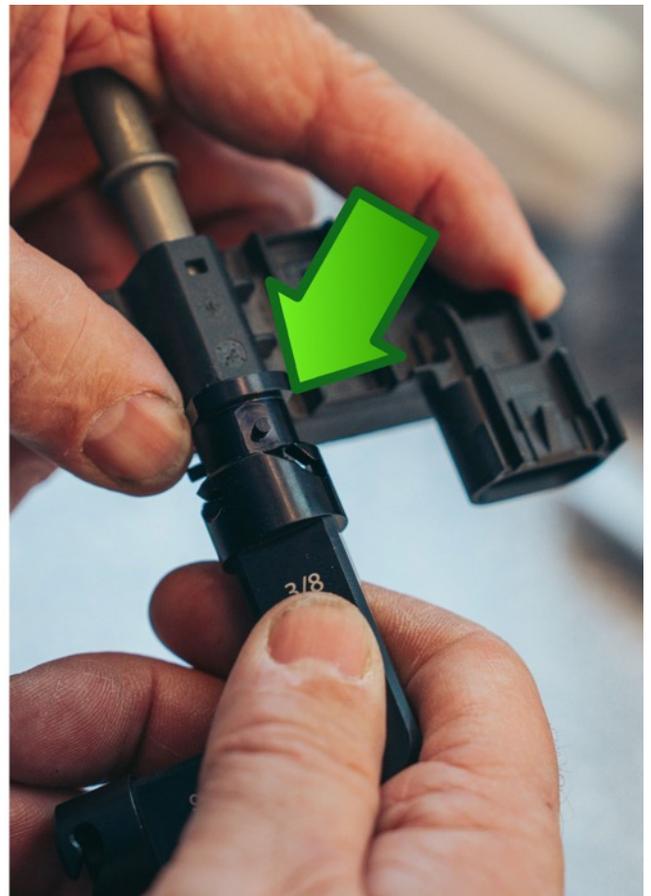


Lubricate fuel line with included Super Lube and attach the ethanol content sensor with the 90° fitting. Be sure the twist-lock fittings are secure.

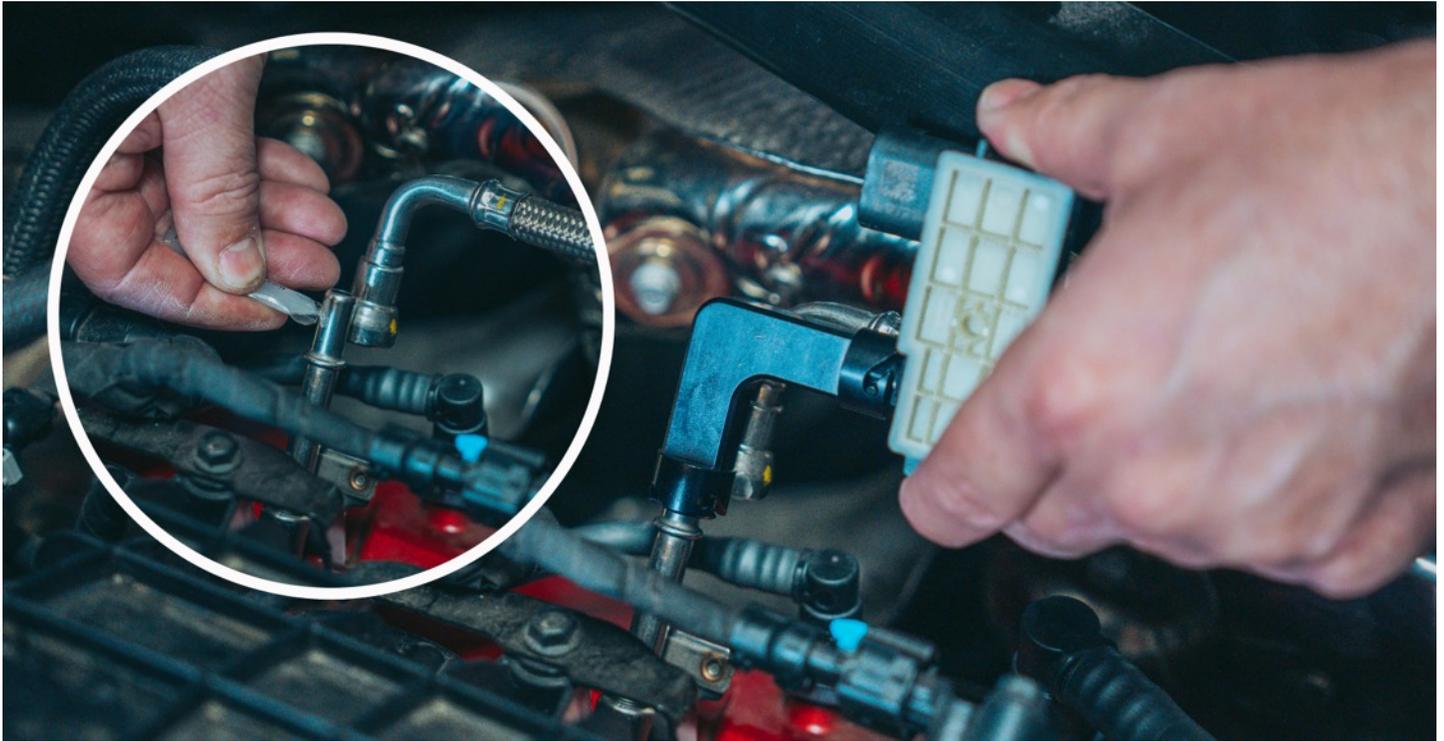

Assemble the fuel line as shown.




Attach the fuel line to the factory braided fuel line on the vehicle until it clicks into place.

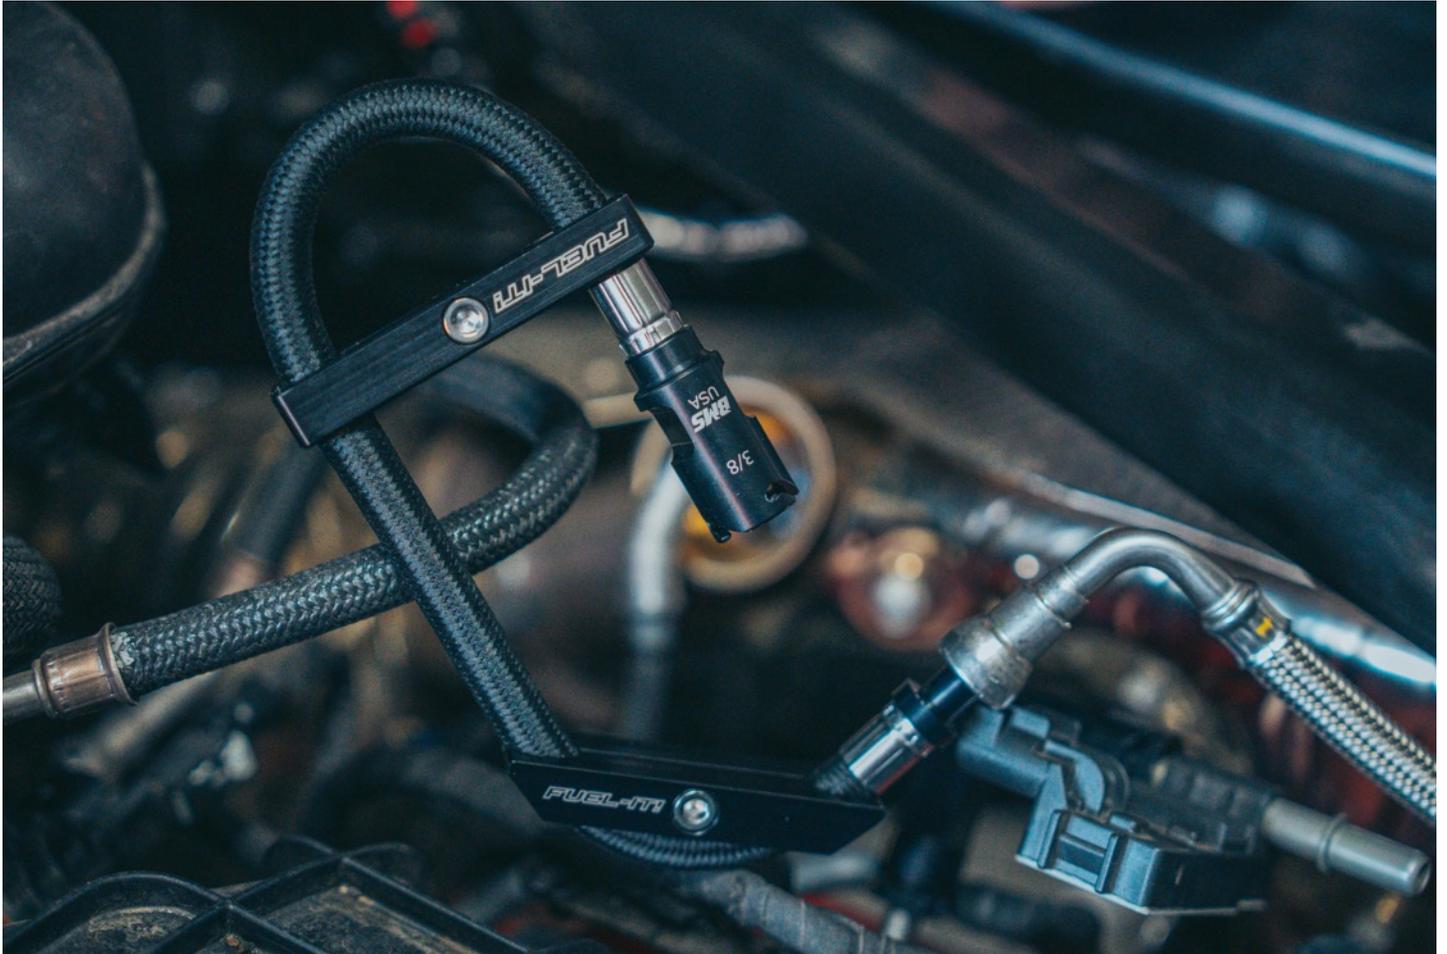

Attach the ethanol content sensor to the fuel line as shown and secure the twist lock fittings.




Plug the Fuel-It! Bluetooth analyzer into the ethanol content sensor.

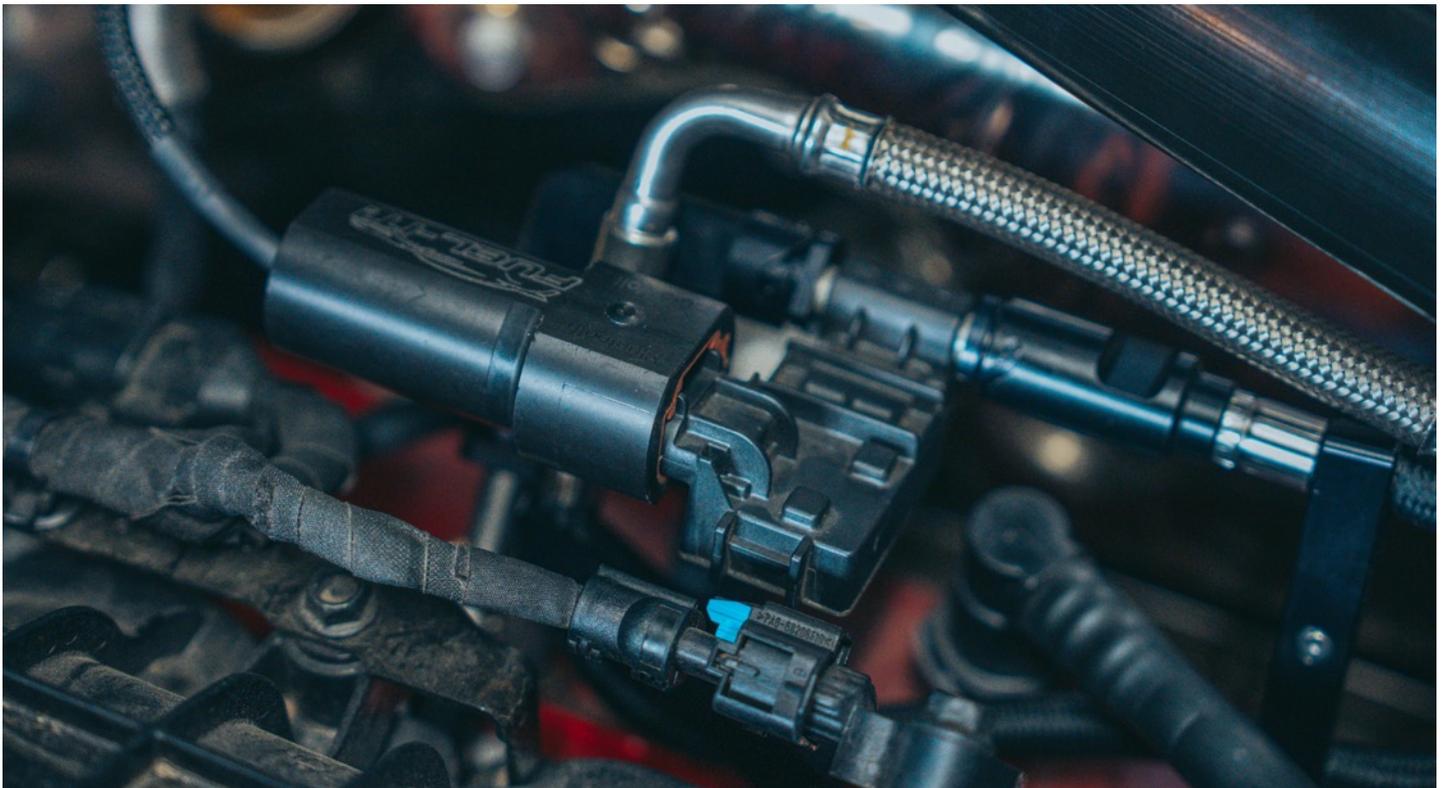


Plug the Fuel-It! Bluetooth analyzer into the extension harness.




Locate the chassis ground and the blue wire to tap into in this area.

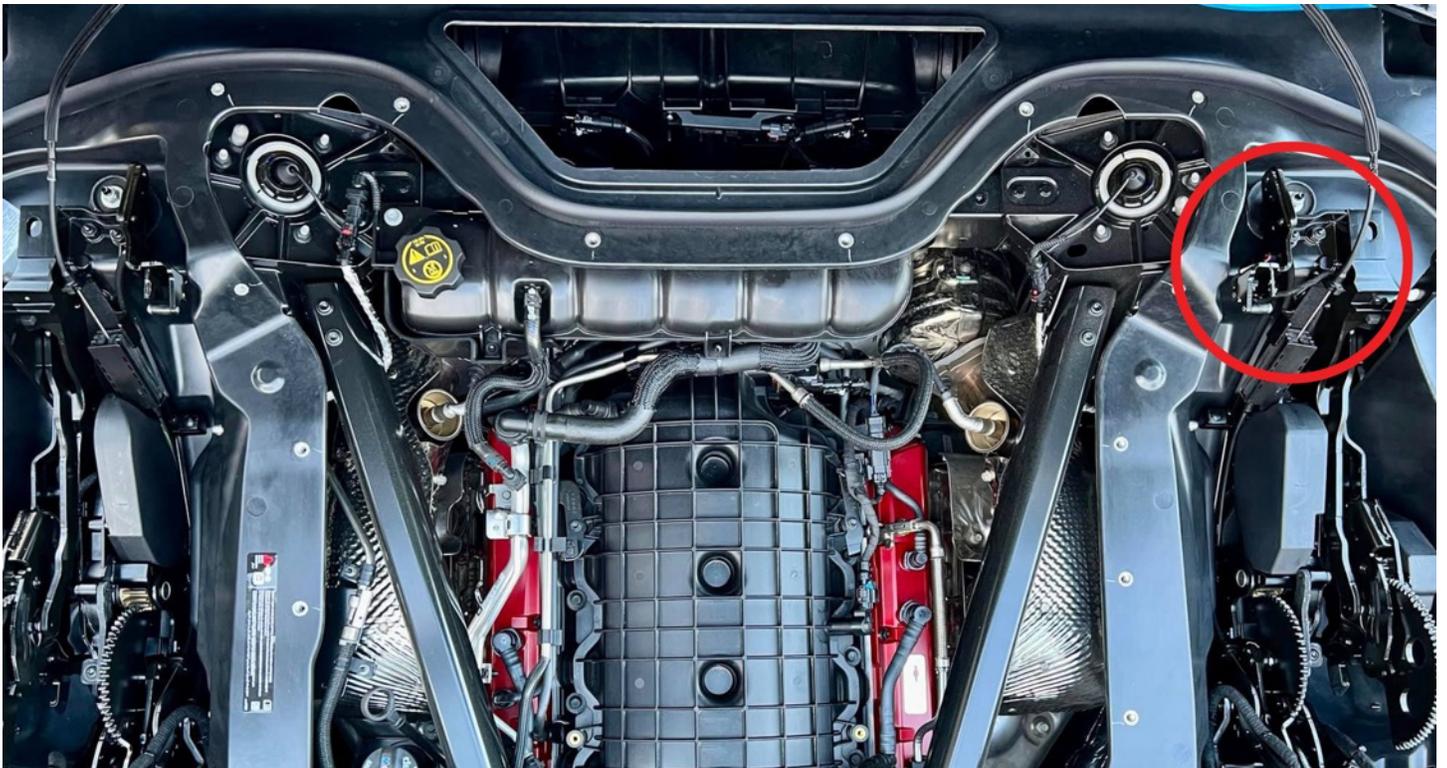

Attach the extension harness ground to the chassis.

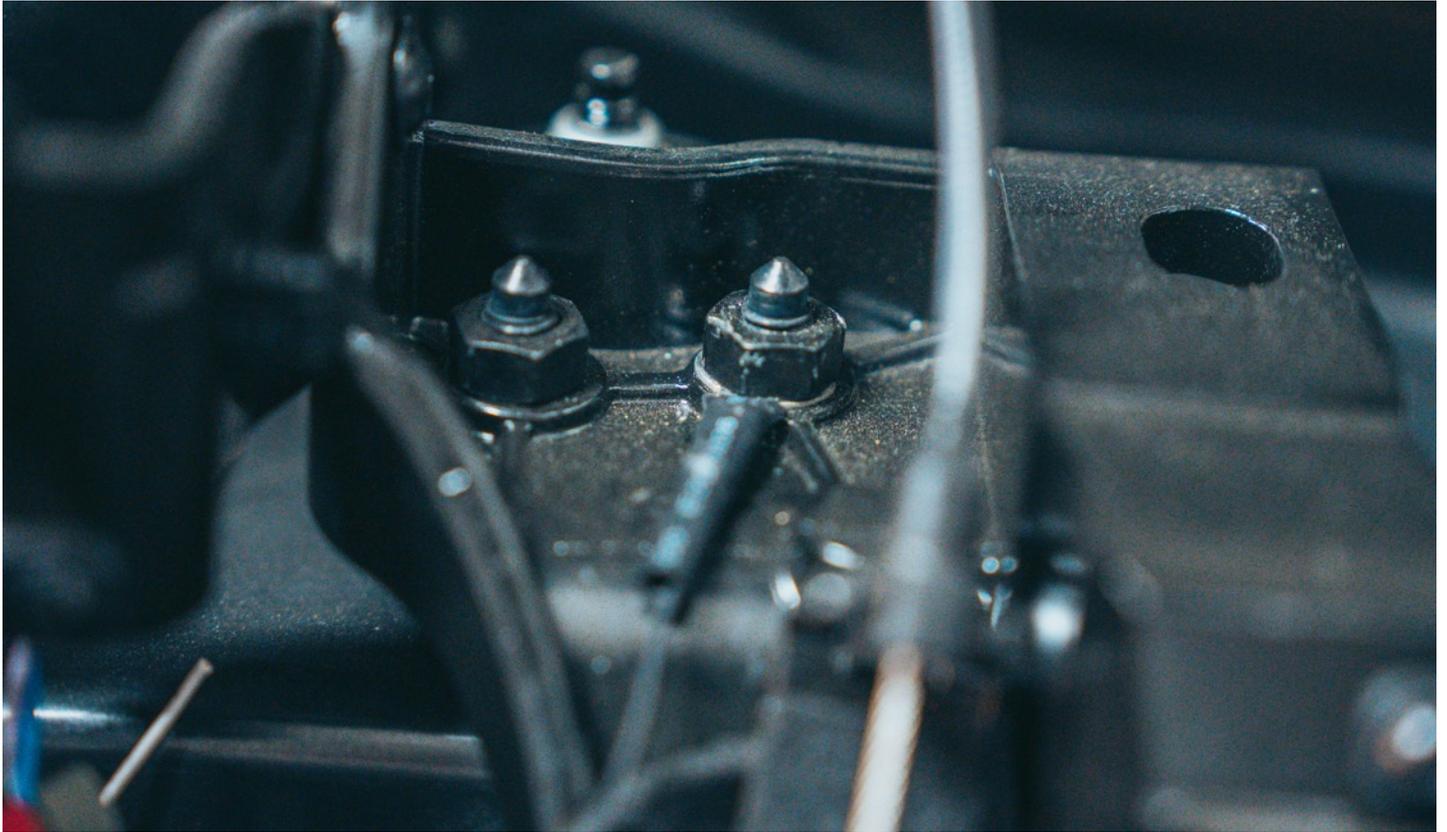

Use the Posi-Tap to tap the blue wire on the vehicle to the red wire on the extension harness.

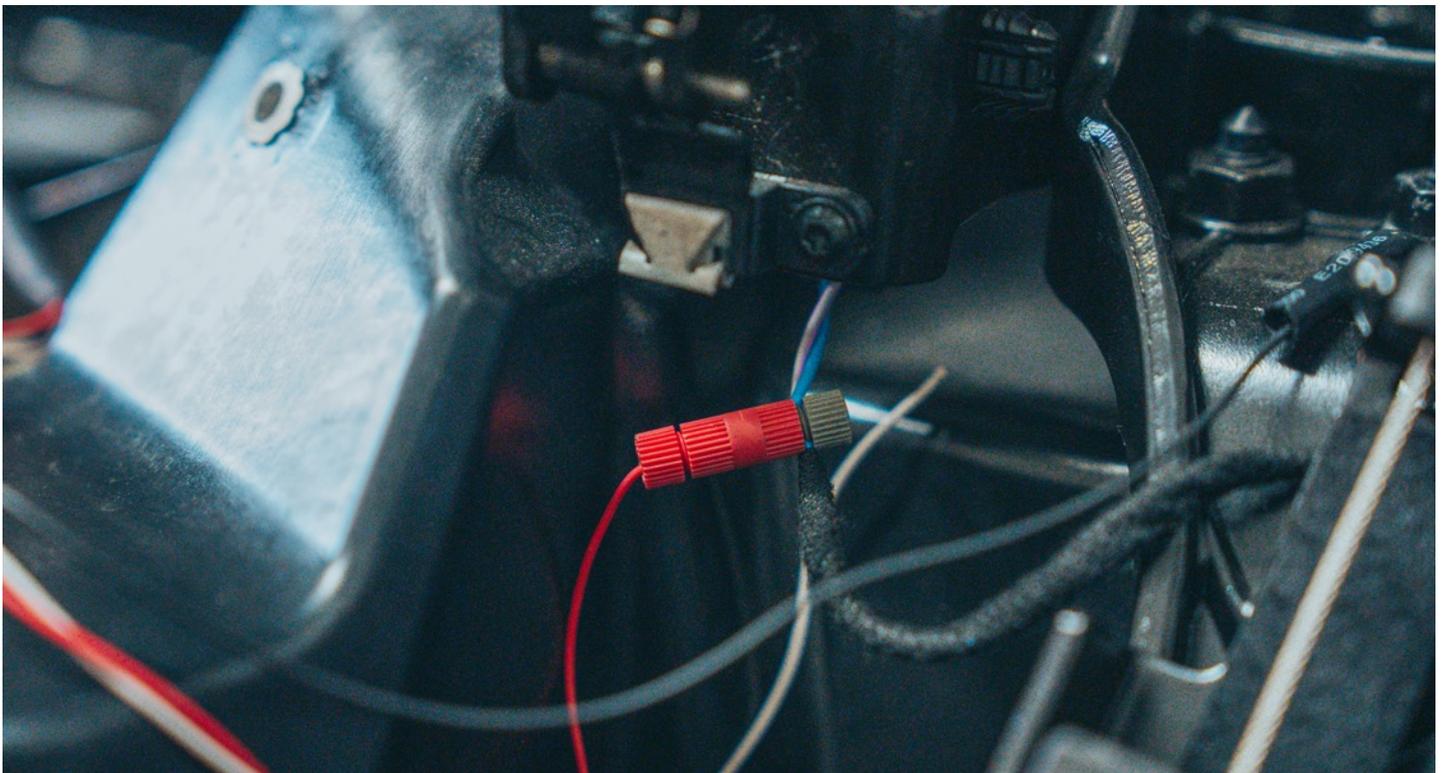

The Fuel-It! ECA app can be downloaded here.

App Store (iOS): <https://apps.apple.com/us/app/fuel-it-eca/id1004246767>

Play Store (Android): https://play.google.com/store/apps/details?id=com.dmacpro91.fuel_it_eth&hl=en