

Blow Off Valve (BOV) Adapters for 2010-2019 Ford Taurus SHO (PAIR) Install Guide

Last updated 4/11/2019

Use subject to terms and conditions posted at <https://burgertuning.com/pages/terms>

THIS PART IS LEGAL FOR USE ONLY IN COMPETITION RACING VEHICLES AS DEFINED UNDER CALIFORNIA LAW AND IS NOT LEGAL FOR USE IN ANY OTHER MOTOR VEHICLE. California law defines a "racing vehicle" as "a competition vehicle not used on public highways." (Calif. Health & Safety Code 39048) This part may only be used on competition racing vehicles operated exclusively on a closed course in conjunction with a sanctioned racing event. Competition-only motor vehicles may not be driven to a racing event on a public highway and must be transported on a trailer or other carrier. USE OF THIS PART IN ANY OTHER VEHICLE MAY SUBJECT YOU TO FINES AND PENALTIES FOR VIOLATION OF FEDERAL AND/OR STATE LAW, WILL VOID YOUR WARRANTY FROM BURGER MOTORSPORTS, INC, AND CAN VOID YOUR VEHICLE'S WARRANTY. It is your responsibility to comply with all applicable federal and state laws relating to the use of this part, and Burger Motorsports, INC hereby disclaims any liability resulting from the failure to use this part in compliance with all applicable federal and state laws.




Open the oil fill cap to give access to remove the engine cover (put oil fill cap back on to avoid any debris, etc. from falling into the engine)



Remove the two bolts/studs on the OEM diverter valves. One is in the front of the engine and one in the rear circled below.

Place the BMS BOV adapter between the charge pipe and the BOV using the supplied hardware to reinstall each unit.

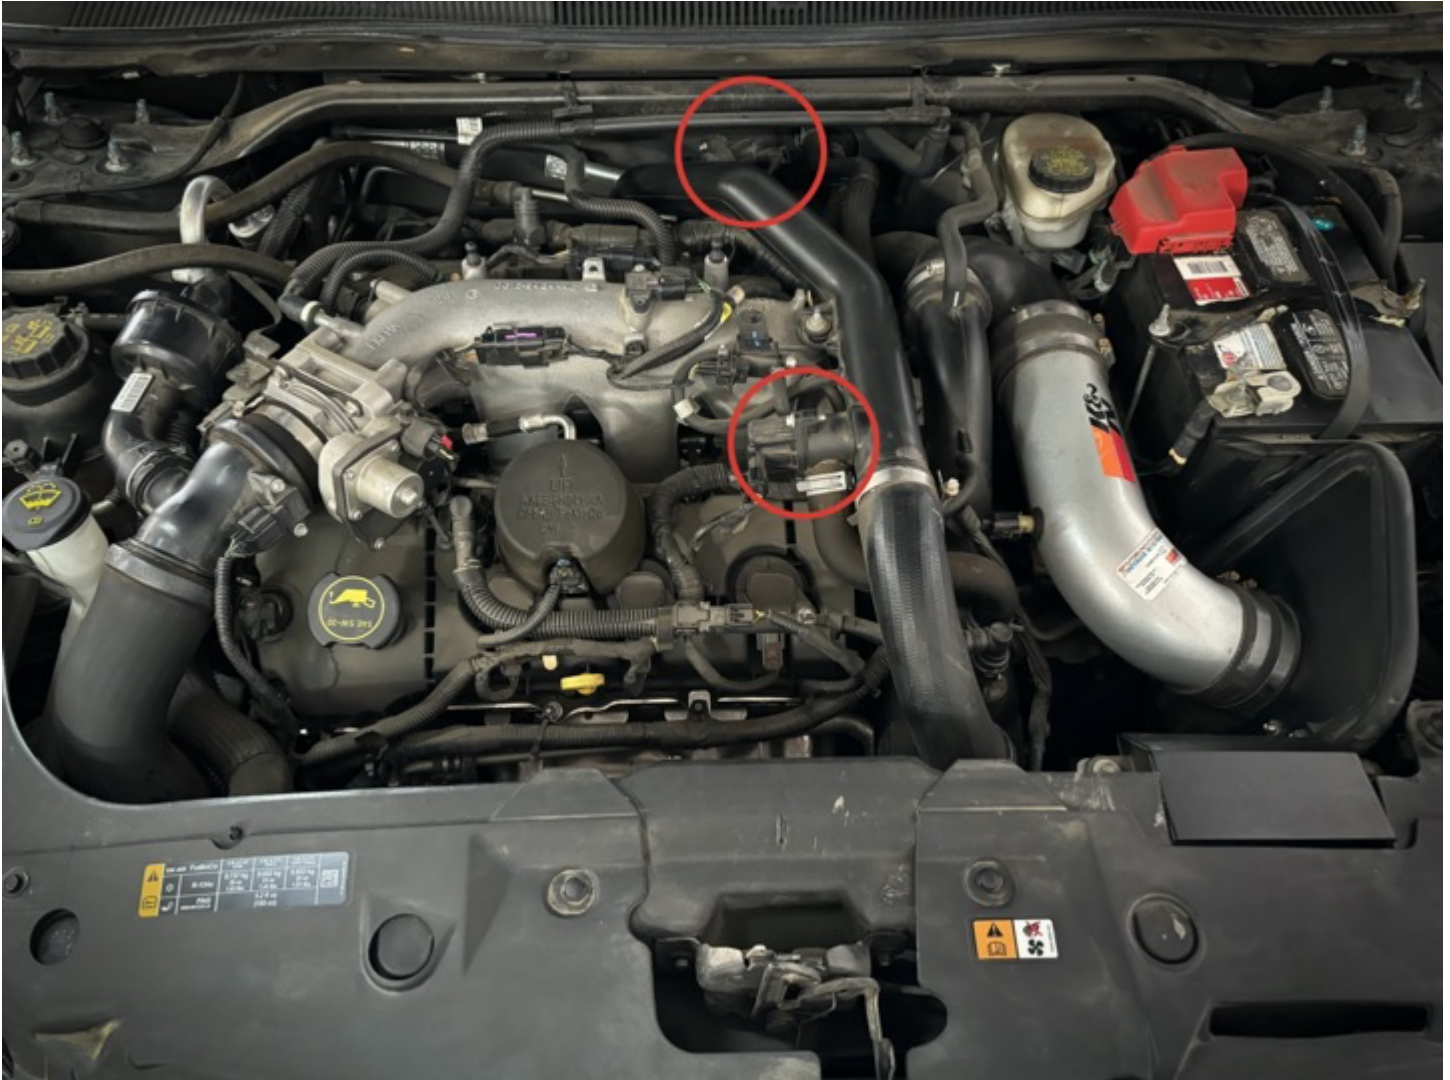

Installed. Replace engine cover and keep the factory bolts in a safe place.

